
 


AIR Socket


Installation and programming manual

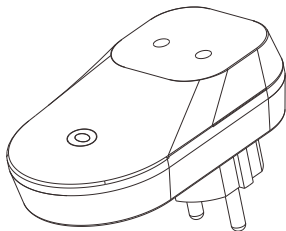

TISAIR



Front

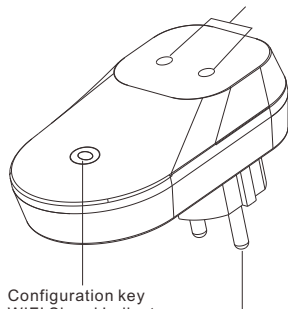

Configuration key
WIFI Signal Indicator

Operation Instruction

Download and install APP



Android



IOS

Open the APP interface and click the Settings icon




Enter the administrator account and password,
default username: user
default password: tis777



Enter the settings interface, select "TIS AIR CONFIG".




Power the smart switch, press the Configuration
TIS key for 5 second till it starts blinking

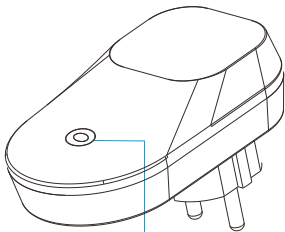

Configuration key
WiFi Signal Indicator

Enter your WiFi router password then click "SEARCH", the device will be configured within 50 seconds

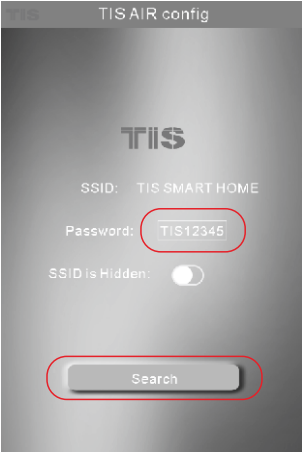


The image shows a mobile application interface for configuring a TIS AIR device. The title bar at the top reads "TIS AIR config". Below the title is the TIS logo. The configuration options are as follows:

- SSID: TIS SMART HOME
- Password: TIS12345 (The password field is highlighted with a red circle.)
- SSID Is Hidden: A toggle switch is currently turned off.

At the bottom of the screen, there is a large button labeled "Search" (The button is highlighted with a red circle.)

Configuration key will be turned to blue once it successfully configured, and the following page will be shown. click on "GO TO MODIFY "

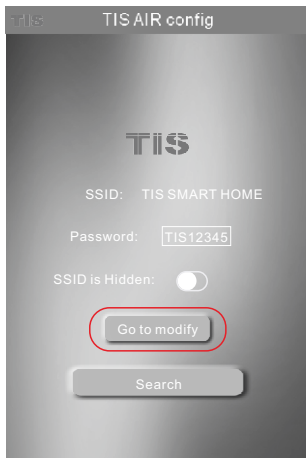

Enter your panel setting

Device comment: any comment like panel location, it helps programmer in advanced search and settings in Device Search software.

Net id & Device ID:

Enter unique Subnet ID and Device ID for your panel.

MAC ADDRESS:

Each device has its MAC address to use it later in Network Setting to be able to link your mobile to the device and internet remote control setting.

New ADD button function

when you saved the panel to new address it is important to link its touch buttons to control the panel relays new address.



AIR-SOCKET-S

Comment:


NetID: DevID:

MAC: 02 02 c3 04 0b 05 03 01

Select Room: press on the select room icon and select the location of where you had installed your panel, if the room is not exist, you can add it from the main setting page.

Channel Icons: press on the channel icon and select the icon from the default library or from your own gallery or just take new picture from your phone.

Channel comment: type the name of your lighting channels.

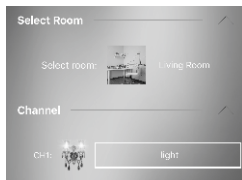

Black Out Setting

you can set the panel to its last status when powered on or set it to turn on or turn off

Server Info:

you can use one device in each project as master gateway for server internet connection.

Warning: just enable the nearest device to your router as master device for internet connection

Enter your own 4 digit password.

Keep the default setting of TIS

Server address as 120.24.42.209, or modify it with other TIS server depends on your country location.

Black Out Setting For Light

Return to last status Upon Powered ON

Restore to the specified value

ON 100%

Server INFO

Use This Device as Master Internet Gateway

Password: ****

Server IP: 120.24.42.209

WARNING:
Use This Device as Server in Project.

Control Section

select your room and start control
your lights, AC , curtain and others



Warranty Card

From the date of purchase, 1 year limited warranty.

Damage caused by wrong installation , physical damaged , users dismantle repair and other man-made damage will be out of warranty

User name	
Phone number	
Address	
Official Dealer	
Product SN	
Purchase date	
Repairing record	